
GTR-DVS / Variable Speed **Digital Tube Roller Quick Start Guide**

What's in the box:

- Quick Start Guide
- Tube Roller
- Power Cables (3 each)
- Extra Fuse

CONTROL PANEL

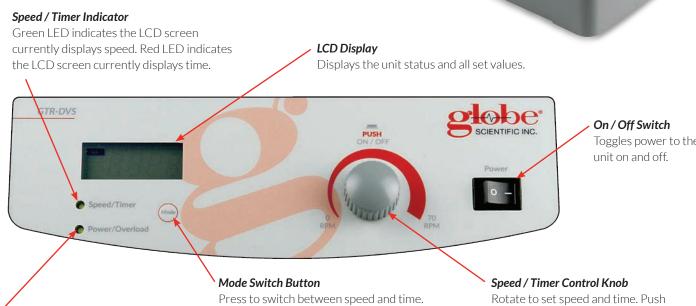

Power / Overload Indicator

Green LED indicates power on. Steady red LED indicates overload protection is enabled. Flashing red LED indicates overload and roller operation is stopped.

IMPORTANT: The tube roller must not be overloaded or damage may occur. Do not load the unit in excess of 8.8lbs (4kg).

For the full User Manual, please visit www.globescientific.com



NOTE: When handling the tube roller, always lift the unit by the front and rear housing only, never by the connecting rods.

to start/stop.

Customer Service, Sales and Technical Support: Phone: 1 (800) 394-4562 • 1 (201) 599-1400 1 (201) 599-1406 • E-mail: mail@globescientific.com Fax:

Toggles power to the